有关产品的使用 **CAUTIONS FOR HANDLING**

在使用之前请一定于都以下的注意事项。

·安全事宜被视为很重要,不能使用在有关维护人体生命 的机器,装置上。

整生

- ·请不要使用在浸入不锈钢的流体中。
- ·有关安装方法请以下面的要领书为基准来进行安装。
- ·使用的压力根据温度的不同也有所不同,请以不锈钢的 特性为基准进行使用。

注意

- ·请进行定期的维修保养。确认有腐蚀,损伤,老化等产品 的异常时或者在配管上有极度的弯曲时,请更换新品。
- ·本产品纳入后进行产品改造,修理以及异常的安装等情 况下为保证对象外。

Read the following instructions before use.

弯曲部分使用弯头,将软管放直安装。

经的情况下使用软管。

经的情况下使用软管。

tube forms a U-shape.

Instead of installing a bent tube, use an elbow so

that the tube can be installed in a satraight line.

在小的弯曲部分,使用弯头,在保持最小反复弯曲半

When installing a bent tube, use a pipe so that the

radius of bending of the tube is the same as of

greater than the allowable curvture of the radius.

在小的弯曲部分,使用弯头,在保持最小反复弯曲半

When installing a bent tube, use a pipe so that the

radius of bending of the tube is the same as of

Use a bent pipe and install the tube so that the

Use a bent pipe and install the tube so that the

greater than the allowable curvture of the radius. 使用弯头后,使其变成U字配管形状,再进行软管的安装。

DANGER

Since first priority is given to safety, the tubes are not applicable to life support facilitles and aquipment.

WARNING

- -Do not use the tube for services that involve using a fluid that corrodes stainless steel.
- ·The tubes should be installed according to the instructions given below
- •Theallowable pressure varies with te operation temperaure.

Use the tube with due consideration given to the characteristics of stainless ateel.

CAUTION

- ·Conduct periodic inspections. When an abnormality such as corrsion, damage, deterioration of the tube or an extreme bending of the pipe is found replace the tube with a new one.
- ·If a modifiction, repair, or abnormal installation is made to the tube after it has been delivered, the manufacturer's guarantee is void.

正确的使用方法 DO'S AND DON'TS

错误 WRONG 正确 RIGHT

过度的弯曲会损伤软管。

Excessive bending damages the tube.

在勉强地弯曲使用的情况下软管的寿命 会明显缩短。

Use of a tube under improperly bent conditions significantly reduces the usable life of the tube.

在勉强地弯曲使用的情况下软管的寿命 会明显缩短。

Use of a tube under improperly bent conditions significantly reduces the usable life of the tube.

连续弯曲的地方特别需要注意。

Particular attention should be given to the part where the tube is continuously bent.

连续弯曲的地方特别需要注意。

Particular attention should be given to the part where the tube is continuously bent.

因为是连续的水平运动, 软管如同被扭起来 一样的弯曲负荷是很危险。

The twisting load that might be plated on the tube as a result of a continuous horizontal movement is very danagerous.



tube forms a U-shape. 通过安装与软管步调一致的运转滚筒来避免勉强的弯曲。

使用弯头后,使其变成U字配管形状,再进行软管的安装。

Use of a roller that rotates synchronously with the movement of the hose prevents improper bending of the bend





过度的弯曲会损伤软管。

Excessive bending damages the tube.

请不要将已卷成圆形的软管一端拉伸使用。 Do not extend one end of the rolled tube to be put into service.



安装半圆的滑车,保持反复弯曲半径。

Use a half pulley to maintain the allowable radius of bending. 对于已卷成圆形的软管,维持其反复弯曲半径的拉伸



方向,请不要勉强地将其卷成圆形。 Form a roll with the allowable radius of curvture in surch a manner to accmomdate the tension on

the tube, and place the roll in a vertical position.



在小的弯曲部分使用弯头,在保持最小反复弯曲半 在勉强地弯曲的使用情况下软管的寿命会 明显变短。

Use of a tube under improperly bent conditions significantly reduces the usable life of the tube.



径的情况下使用软管。 When installing a bent tube, use a pipe so that the radius of bending of the tube is the same as of greater than the allowable curvture of the radius.



在软管的安装部分, 受旋转运动影响软管 会扭曲。

If a rotating movement is transmitted to the connecting portion of a tube, the tube is twisted.



安装上旋转接头,请不要让软管扭曲。 Install a rotary joint to avoid the tube being Twisted.



安装软管时,两端的部分与运动方向不同 位置的情况下,会发生扭转弯曲。

If a tube is installed in a direction that differs form the direction of the movement, the tube is twisted.



安装软管时,请与运动方向一直保持平行方

The tube should be installed so that the centerline of the tube remains parallel to the direction of the



Web:http://www.shjiju.com

Tel:15502107702/13764250336

Fax:021-33632756

E-mail:hj@shjiju.com